



Standard Tracker Model ST-5000-A

Tracker Installation Guide for 3 & 4 Wire units with Internal Antenna


Installing the Tracker

Unit should be attached to equipment with provided hardware, or another similar method to ensure a secure mounting.

1. Choose a location and attach the tracker. Make sure it will be within reach of the battery connection.
2. Connect the tracker's power wires to the equipment's battery to provide 12 to 24 VDC to SolarTrak. The wire with the fuse holder MUST be attached to the Positive (+) battery terminal. Coil any excess wire loosely.
3. Connect the 3rd and 4th wire to a sensor or device that will show a change in voltage. Example: Ignition circuit (for combustion engines) or the solenoid (for electric motors).
4. Last, connect the tracker to the battery using the gray waterproof connector.

Tracker Info:

Tracker

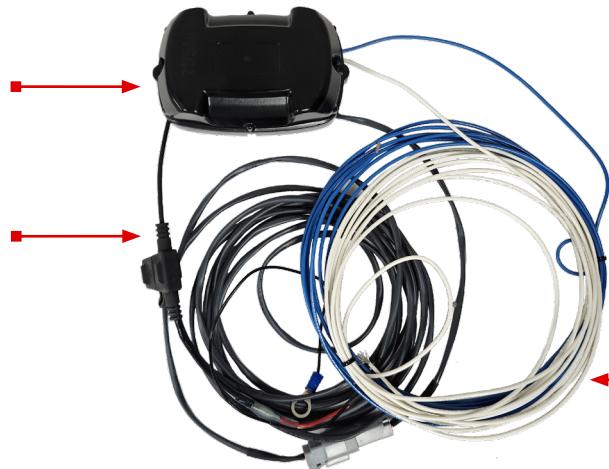

Battery
Connector
Cable

3rd & 4th
Wire

After Installation

- A. Tell your company's SolarTrak Administrator which SolarTrak unit (using the unit's serial number) has been installed on which piece of equipment. Tell your administrator the Manufacturer, the Model number, plus any company identifier (like your inventory number).
- B. Once installation is completed, the equipment will appear in SolarTrak online in the "Trackers" view as "Unassigned".
- C. Once your company's SolarTrak Administrator assigns a specific SolarTrak unit to a specific piece of equipment, the equipment will appear online in the Map View and List View and can be tracked.

BAD INSTALL CHOICES

Do not install on moving parts, or on sides of vehicles without constant access to the sky. These locations will prevent the GPS from working correctly.

Sample 3rd & 4th Wire Installation



Run 3rd Wire (blue) along back of battery
drawer and connect with ring terminal



USER GUIDE: [www.solar_trak/Downloads/USER GUIDE](http://www.solar_trak/Downloads/USER%20GUIDE)

Any questions? Call SolarTrak Support: **484-223-4994**

7620 Cetronia Rd, Allentown, PA
Rev 062025